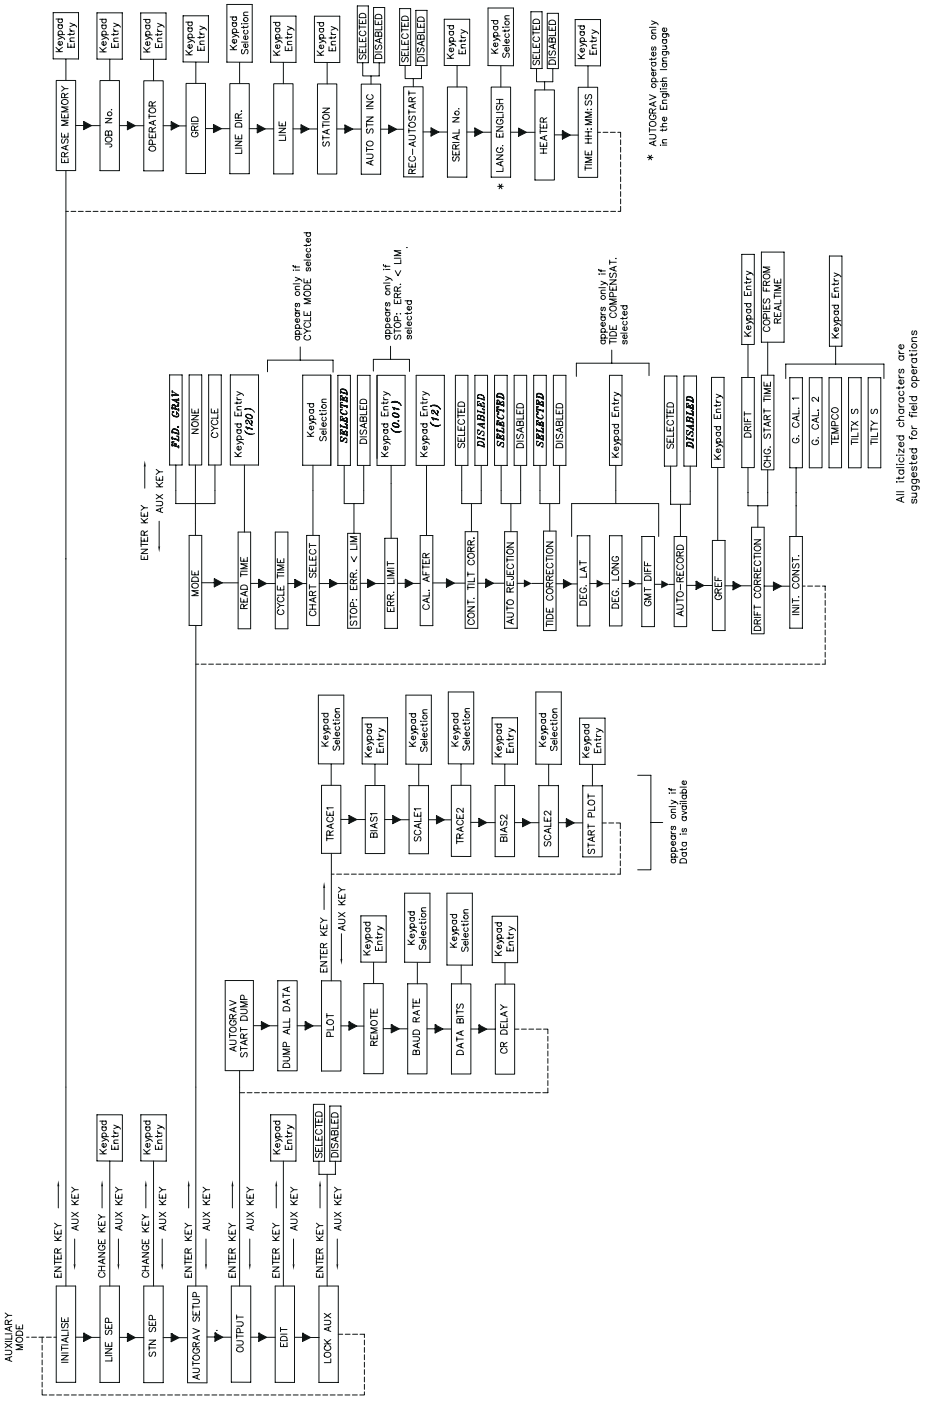
AUXILIARY MODE
INITIALISE
LINE SEP
STN SEP
AUTOGRAV SETUP
OUTPUT
EDIT
LOCK AUX
ENTER KEY
AUX KEY
CHANGE KEY
Keypad Entry
SELECTED
DISABLED
AUTOGRAV START DUMP
DUMP ALL DATA
PLOT
REMOTE
BAUD RATE
DATA BITS
CR DELAY
TRACE1
BIAS1
SCALE1
TRACE2
BIAS2
SCALE2
START PLOT
Keypad Selection
appears only if Data is available
ERASE MEMORY
JOB No.
OPERATOR
GRID
LINE DIR.
LINE
STATION
AUTO STN. INC
REC-AUTOSTART
SERIAL No.
LANG. ENGLISH
HEATER
TIME HH:MM:SS
* AUTOGRAV operates only in the English language
MODE
FLD. GRAV
NONE
CYCLE
READ TIME
Keypad Entry (120)
CYCLE TIME
CHART SELECT
Keypad Selection
appears only if CYCLE MODE selected
STOP: ERR. < LIM
SELECTED
DISABLED
ERR. LIMIT
Keypad Entry (0.01)
appears only if STOP: ERR. < LIM selected
CAL. AFTER
Keypad Entry (12)
CONT. TILT CORR.
AUTO REJECTION
TIDE CORRECTION
DEG. LAT
DEG. LONG
GMT DIFF.
appears only if TIDE COMPENSAT. selected
AUTO-RECORD
GREF
DRIFT CORRECTION
INIT. CONST.
DRIFT
CHG. START TIME
COPIES FROM REAL TIME
G. CAL. 1
G. CAL. 2
TEMPCO
TILTX S
TILTY S
All italicized characters are suggested for field operations